# COMPACT DISC / *CD*



**SCD**

**Code 2426**

*SPECIFICATIONS SUBJECT TO MODIFICATIONS*

DOCUMENT NON CONTRACTUEL

## PANNEAU AVANT / *FRONT PANEL*

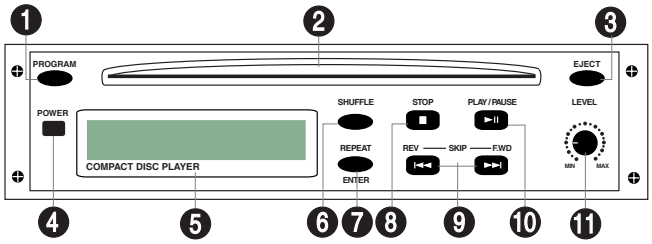

**1 PROGRAMME**
Sélection mode programme.

**2 Compartiment CD**

**3 EJECT**
Ejection du CD.

**4 POWER**
Appuyer sur cette touche pour mettre en ou hors service lecteur CD.

**5 AFFICHEUR**
Donne des renseignements sur le fonctionnement du CD

**6 SHUFFLE**
Lecture dans un ordre aléatoire

**7 REPEAT- ENTER**
Répétition de la lecture

**8 STOP**
Arrêt de la lecture

**9 SAUT**
Sélection en cours de lecture d'une autre plage
Sélection du numéro de la plage par lequel vous souhaitez commencer la lecture.

**10 PLAY / PAUSE**
Début de la lecture / Interruption momentanée de la lecture

**11 Volume (LEVEL)**
Réglage du volume.

***1 PROGRAM***
*Sélection a program.*

***2 CD Compartement***

***3 EJECT***
*Eject CD.*

***4 POWER***
*Press this switch to switch the power on. Press it again to switch the power off.*

***5 DISPLAY***
*Informs you about the functioning of the player.*

***6 SHUFFLE***
*Playing in random order*

***7 REPEAT- ENTER***
*Repeating play*

***8 STOP***
*Stopping play*

***9 SKIP***
*Selecting another track during play.*
*Selecting a track to start play with.*

***10 PLAY / PAUSE***
*Starting play / Interrupting play.*

***11 LEVEL***
*Level control.*

## PANNEAU ARRIERE / *REAR PANEL*

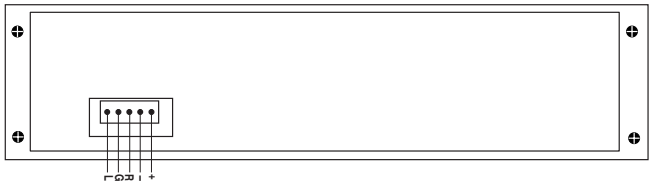

**+ :** Alimentation +12V
**- :** Masse
**R:** Sortie R
**G:** Terre
**L :** Sortie L

***+ :*** *Power supply +12V*
***- :*** *Common reference*
***R:*** *Output R*
***G:*** *Ground*
***L :*** *Output L*

MERLAUD
9 rue de La Briqueterie - P.A.E. des FAUVETTES - 95330 DOMONT (FRANCE)
Tel. 01 39 91 77 78 - Fax 01 39 91 90 66 - www.merlaud.com - merlaud@merlaud.com